

KENWOOD

INTERFACE KIT

IF-10A
IF-10B
IF-10C

INSTRUCTION MANUAL

KENWOOD CORPORATION

© PRINTED IN JAPAN B50-8209-10(K,M)(MC)
93/12 11 10 9 8 7 6 5 4 3 2 1 92/12 11 10 9 8 7 6

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient the receiving antenna

Relocate the computer with respect to the receiver. Plug the computer into a different outlet so that computer and receiver are on different branch circuit.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet prepared by the Federal Communications Commission helpful:

"How to Identify and Resolve Radio-TV Interference Problems". This booklet is available from the U.S. Government Printing Office, Washington DC 20402, Stock No. 004-000-00345-4.

WARNING

This equipment has been certified to comply with the limits for a Class B computing device, pursuant to Subpart J of Part 15 of FCC Rules. Only peripherals (computer input/output devices, terminals, printers, etc.) certified to comply with the Class B limits may be attached to this computer. Operation with non-certified peripherals is likely to result in interference to radio and TV reception.

This equipment requires a shielded cable for interconnection to the RS-232C interface unit model IF-232C. Please use a cable supplied with IF-232C for interconnect to this unit. For the interface to a computer, please consult with the IF-232C instruction manual.

Thank you for purchasing this new interface kit.

IMPORTANT:

Please read this Instruction Manual carefully before placing the unit in service.

SAVE THIS INSTRUCTION MANUAL.

This instruction manual describes both the IF-10A, the IF-10B, and the IF-10C. When appropriate, separate descriptions are given for these three items.

IF-10A: INTERFACE KIT FOR THE TS-711A/711E/811A/
811B/811E

IF-10B: INTERFACE KIT FOR THE TS-940S

IF-10C: INTERFACE KIT FOR THE TS-140S/680S

The IF-10A/10B/10C interface kit is designed to be installed internally in transceivers such as the TS-140S/680S/711A/711E/811A/811B/811E/940S to allow computer assisted control of various transceiver operating parameters. Control is performed via the computers RS-232C terminal via the IF-232C interface (level translator).

The following explicit definitions apply in this manual:

Note : If disregarded, inconvenience only, no risk of equipment damage or personal injury.

Caution: Equipment damage may occur, but not personal injury.

1. BEFORE

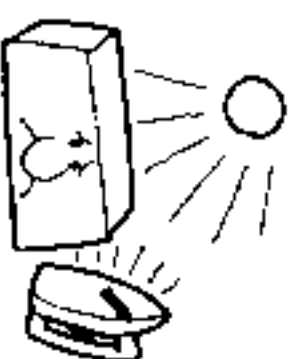
Notes on installation:
Do not place the unit where it is exposed to direct sunlight, near a heat source, etc.

1. BEFORE INSTALLATION
2. SPECIFICATIONS
3. INSTALLATION
4. OPERATION
5. SCHEMATIC

1. BEFORE OPERATION

Notes on installation

Do not place the unit in a place which is exposed to direct sunlight, near a heating appliance, etc.



CONTENTS

1. BEFORE OPERATION	3
2. SPECIFICATIONS AND ACCESSORIES	3
2-1. SPECIFICATIONS	3
2-2. ACCESSORIES	4
3. INSTALLATION	5
3-1. IF-10A	5
3-2. IF-10B	6
3-3. IF-10C	7
4. OPERATION	8
4-1. PRECAUTIONS FOR COMPUTER-CONNECTED OPERATION	8
4-2. CONTROL OPERATION	8
4-3. COMMANDS	9
5. SCHEMATIC DIAGRAM	47

2. SPECIFICATIONS AND ACCESSORIES

2-1. SPECIFICATIONS

2-1-1. Interface

Communication method Serial interface, full-duplex

Transfer rate 4800 BPS

(bits per second)

Synchronization Start-stop

(Asynchronous)

Bit construction 1 start bit, 8 character bits, 2 stop bits

Parity None

Signal format TTL level

2-1-2. Terminal Connections

Pin No.	Signal Name		I/O
1	GND	Signal ground	Output
2	$\overline{\text{TXD}}$	Transmit data	Input
3	$\overline{\text{RXD}}$	Receive data	Input
4 (Note)	CTS	Transmit enable	Input
5	RTS	Receive enable	Output
6	NC	No connection	

Note:

For the TS-940S pin 4 is +5V.

GND: This is the signal ground terminal.

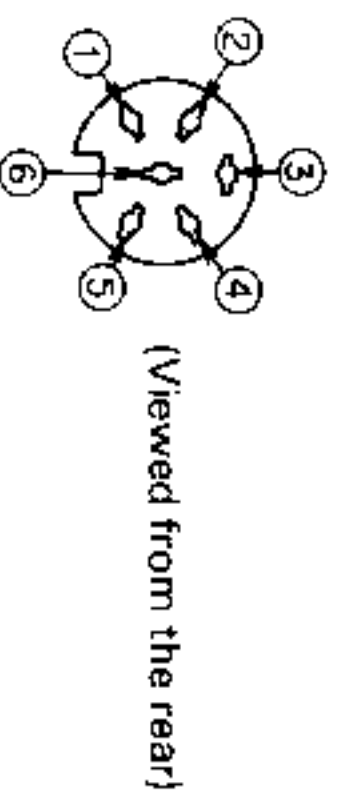
TXD: The transmit data is the serial data from the transceiver to the computer. The output utilizes negative logic.

RXD: The receive data is the serial data from the computer to the transceiver. The input utilizes negative logic.

CTS: This signal is supplied from the computer, and is used to inhibit transmit data from the transceiver when the computer is not ready to receive. The input utilizes positive logic. (Transmit data is stopped by a logic low.) [Except TS-940S]

RTS: This signal is applied to the computer, and is used to inhibit transmit data from the computer when the transceiver is not ready to receive it. The output utilizes positive logic. (Inhibit is requested when the level is low.)

Connector pin configuration



2-2. ACCESSORIES

The following accessories are supplied with the unit. Confirm that all are present.

1. EPROM (IF-10A/10B only) .. (MBM2732A-30) . 1 ea.
2. Boss (IF-10A only) (J32-0795-04) 2 ea.
3. Pan head screw
(IF-10A/10C only) (N30-2605-41) 2 ea.
4. Self tapping screw
(IF-10B only) (N35-2605-41) 2 ea.
5. Brazier head tapping screw
(IF-10C only) (N87-2606-46) 4 ea.
6. DIN connector bracket
(IF-10A/10C only) (E06-0655-05) 1 ea.
7. Instruction manual (B50-8209-xx) 1 ea.

Note:

The IF-10A/10B/10C does not include computer software, guidelines are provided but due to the wide variety of computers available, all of which have their own languages it is left up to the owner to design his or her own software package.

3. INSTALLATION

3-1. IF-10A

Caution: _____

Before removing the cover be sure to disconnect the power cable, or damage may result to the radio or interface kit.

1. Remove the eight screws securing the upper cover using a #2 Phillips screwdriver.
 2. Remove the two screws marked  from the control unit, and install the supplied bosses.
 3. Plug the interface board onto the 7 pin connector (J5) and 9 pin connector (J6) as shown in the illustration.
 4. Secure the circuit board using the two screws removed in step number 2.
 5. Remove the plastic plug that is currently installed in the ACC1 jack area, at the upper rear corner of the radio.
 6. Install the DIN connector using the bracket supplied, as shown in the illustration.
 7. Install the EPROM (Erasable and Programmable Read Only Memory) into the vacant socket on the circuit board.
- Caution:** _____
- Align the notch on the EPROM with the notch in the socket, or damage to the EPROM and or circuit board may result!
8. Replace the top cover.

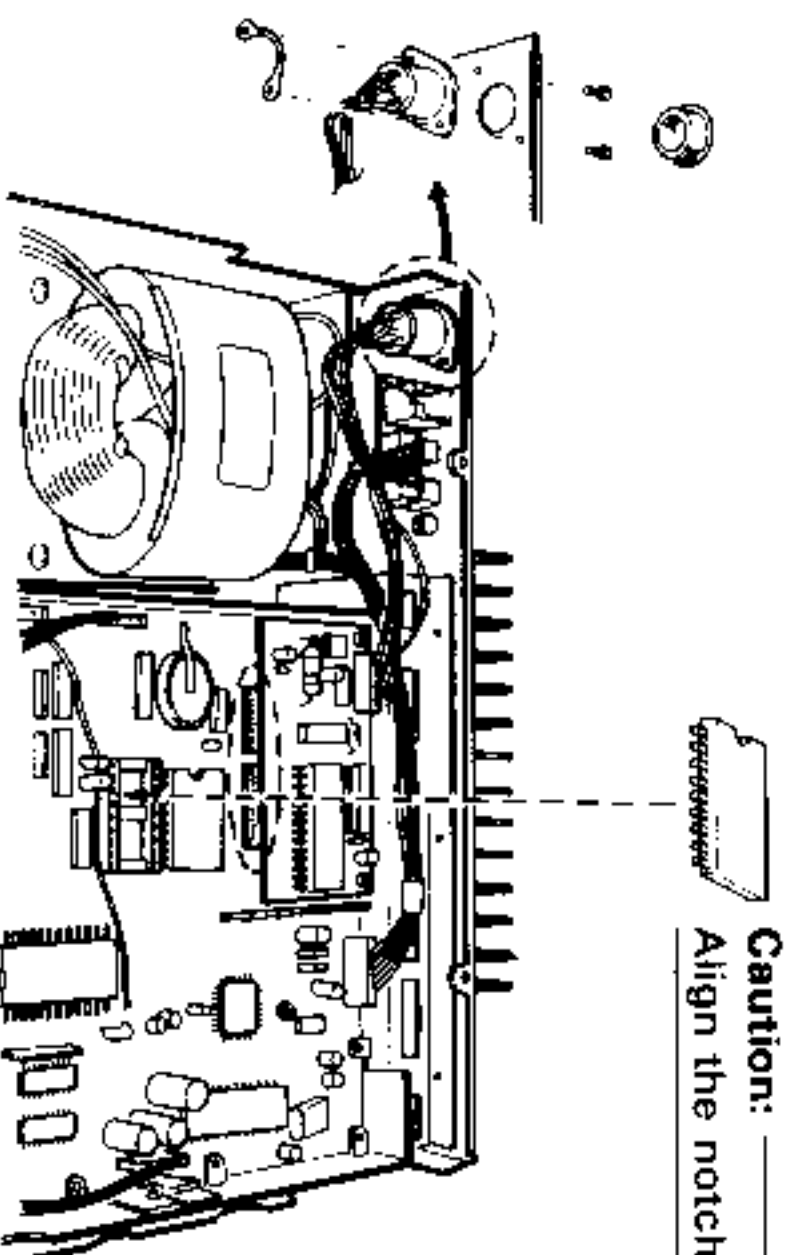


Fig. 3-1

3-2. IF-10B

Caution:

Before removing the cover be sure to disconnect the power cable, or damage may result to the radio or interface kit.

1. Remove the eight screws securing the transceiver's upper cover, using a #2 Phillips head screwdriver, and remove the top cover. (Fig. 3-2)
 2. Remove the four screws that secure the speaker mounting bracket to the chassis and swing the bracket up towards the AT (antenna tuner) unit. Be especially careful of the wiring harness. Don't stretch the cable harness. (Fig. 3-3, Fig. 3-4)
 3. Next remove the eight screws that secure the shield covering Digital A unit. Swing the cover to the side. Again be careful of the wiring harness. (Fig. 3-5)
 4. Place the interface unit on the hexagonal boss on the Digital A unit, and secure it with the screws provided with the interface kit.
 5. Connect the connector on Digital A unit to the interface unit as shown in Fig. 3-6.
 6. Install the expansion EPROM (Erasable and Programmable Read Only Memory) into the vacant socket on the digital unit. Orientation of this component is critical for proper operation of the radio, and interface.
- Caution:**
- Install the EPROM so that the notch in the end is on the same end as the notch in the IC socket.

7. Replace the shield cover. Do not pinch any wires under the cover when you tighten it down.
8. Reinstall the speaker mounting bracket, confirming that the connector located on the left side of the digital A unit is secure, and not pinched under the bracket.
9. Replace the top cover.

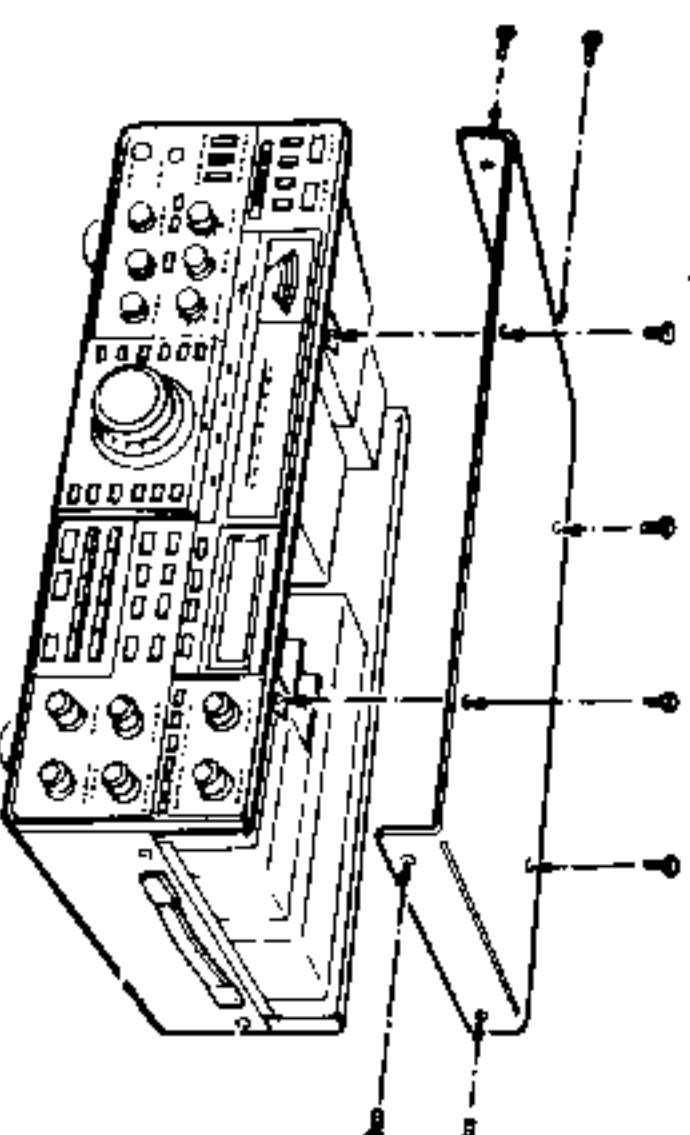


Fig. 3-2
Speaker mounting bracket

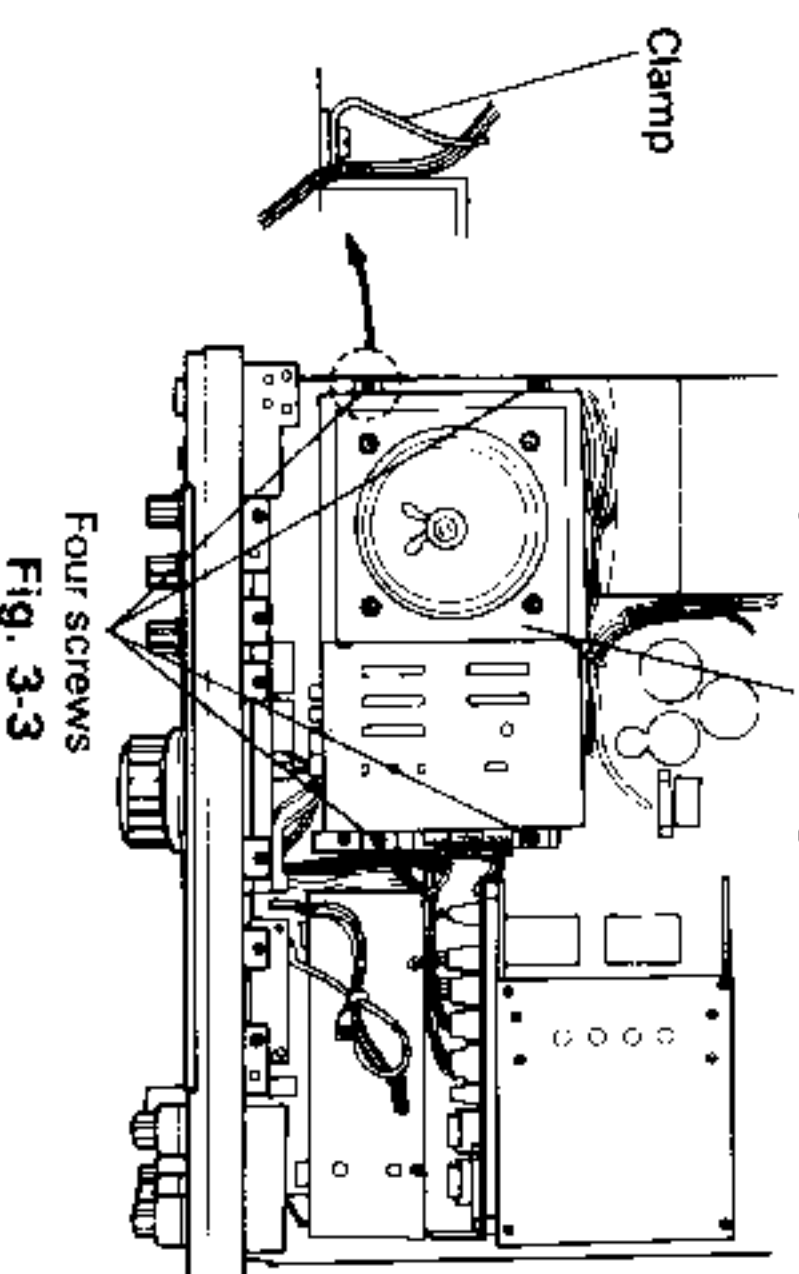


Fig. 3-3
Four screws

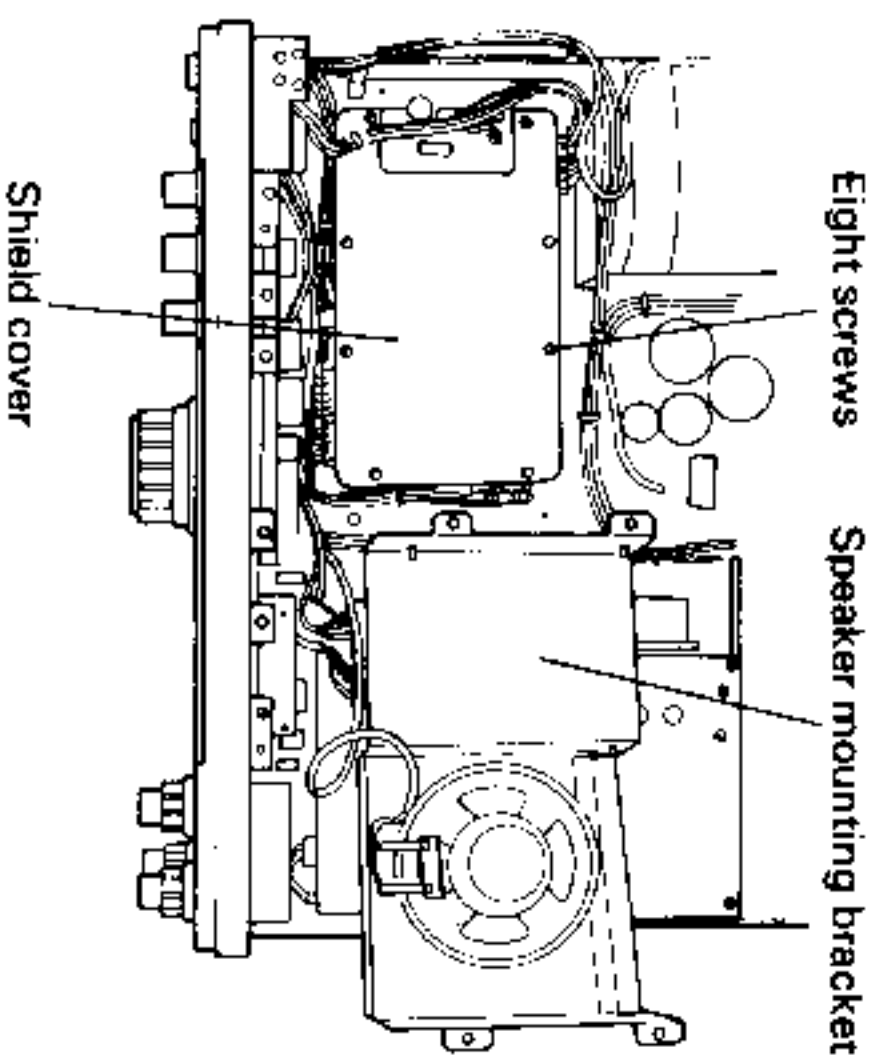
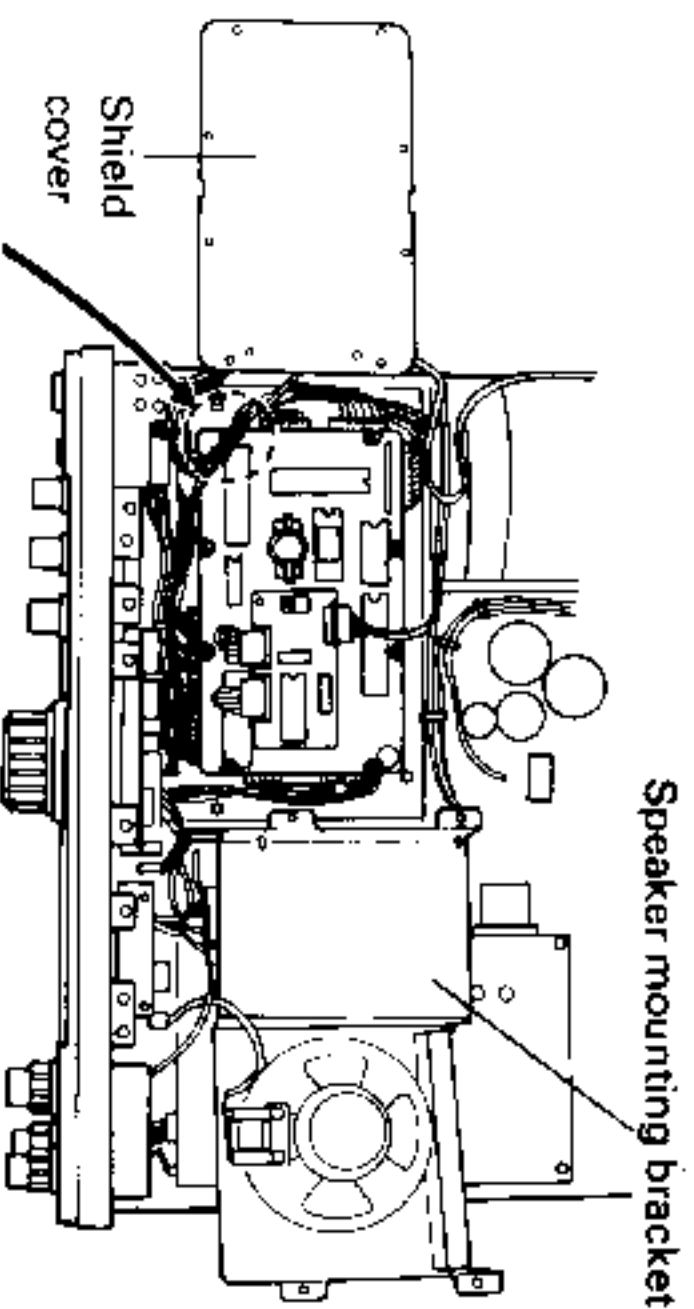


Fig. 3-4



Caution: _____
Don't stretch the cable harness.

Fig. 3-5

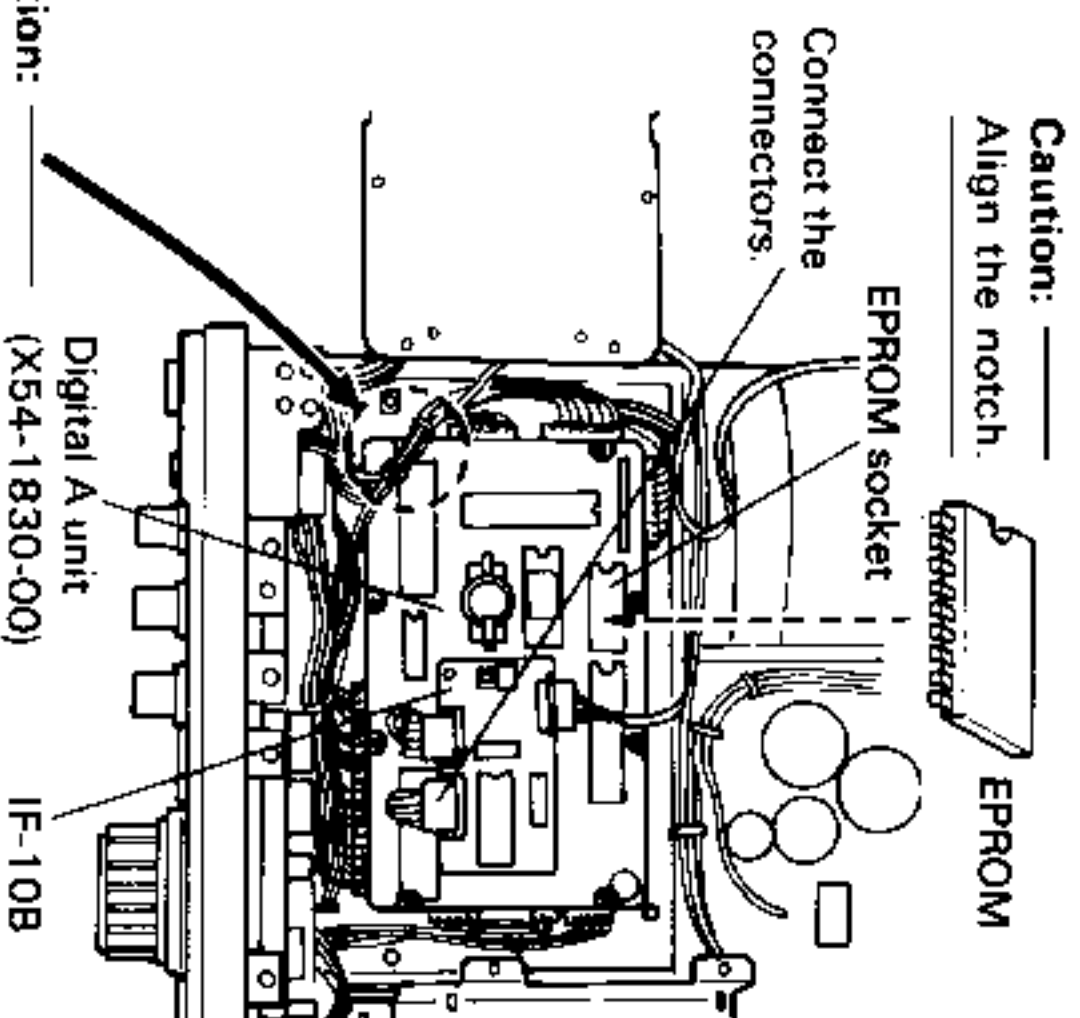


Fig. 3-6

3-3. IF-10C

Refer to the TS-140S/680S manual for installation instructions.

4. OPERATION

Caution:

Turn the POWER switch OFF before making connections.

4-1. PRECAUTIONS FOR COMPUTER-CONNECTED OPERATION

When connecting the transceiver with a computer, check the following points.

1. Are the connections correct?

The transceiver output should be connected to the computer input and the transceiver input to the computer output.

Example:

Transceiver's transmission data — Computer's
receive data

Transceiver's RTS — Computer's CTS

2. Is the computer's transmission rate 4800 BPS (bits per second)?
3. Is the computer's bit configuration correct?
1 start bit, 8 character bits, 2 stop bits, no parity.

4-2. CONTROL OPERATION

Most computers handle data in the form of "bits", and "bytes". A bit is the smallest piece of information that the computer can handle. A byte is composed of 8 bits. This is the most convenient form for most computer data. This data may be sent in the form of either serial

or parallel data strings. The parallel mode is faster, but more complicated, while the serial form is slower it requires less complicated equipment, and therefore is less expensive.

Serial transmission of data occurs over a single line using time-division methods. This use of a single line also offers the advantage of reducing the number of errors due to line noise.

For control of the transceiver via the computer only three lines are theoretically required: transmit data ($\overline{\text{TXD}}$), receive data ($\overline{\text{RXD}}$), and ground (GND). From a practical standpoint it is also necessary to incorporate some means of controlling when this data transfer will occur. We don't want the computer and transceiver sending information at the same time! This is controlled by the RTS and the CTS lines.

The IF-232C and the IF-10A/10B/10C are used in conjunction to provide voltage conversion. RS-232C deals in voltages above and below TTL levels, and must be converted to prevent damage to the transceiver. This interface/conversion is handled by the IF-232C.

The actual command sequence would be similar to those described below:

For example, the radio is placed into the transmit mode whenever the character string "TX" is sent from the computer. The character string "TX" is called a command. It tells the transceiver to do something. There are approximately 21 to 30 different commands available for control of the transceiver.

These commands may be incorporated into a computer program written in BASIC or any other high level language such as PASCAL, etc. Programming methods vary from computer to computer so please refer to the instruction manuals included with your terminal program, and computer.

4-3. COMMANDS

The illustration below demonstrates that a command is composed of two alphabetical characters, various parameters, and the terminator to signal the end of the command.

Example:

FA 000070000000 ; Command to set
 ↑ ↑ ↑
 Command Parameters Terminator VFO A to 7 MHz.

4-3-1. Command Description

A command may consist of either lower or upper case alphabetical characters.

4-3-2. Parameter Description

(Refer to the parameter list.)

Parameters are used to specify specific information necessary to implement the desired command. The exact number of parameters necessary for each command is predetermined. If a particular parameter is not applicable to the transceiver you are controlling the

parameter digits should be filled using any character except the terminator ";".

For example the MC (Memory channel selector) command uses two parameters, 1 column to specify the memory bank number, and 2 columns to specify the memory channel number. To specify CH9 of memory bank number 1, the command would be:

"MC109;" The memory bank number is not

necessary when programming the TS-140S/680S/711A/711E/811A/811B/811E so the command could be as given above "MC 109" or as:
 "MC _09;" In this case a blank has been used to fill the parameter block for the memory bank number.

The following are examples of bad commands:

"MC09;" No memory bank specification (not enough parameters)

"MC19;" Not enough digits in the memory channel parameter, i.e. CH9 should be given as "09".

"MC _1 _09 _;" Unnecessary characters between parameters.

"MC 1009" No terminator

Parameter list

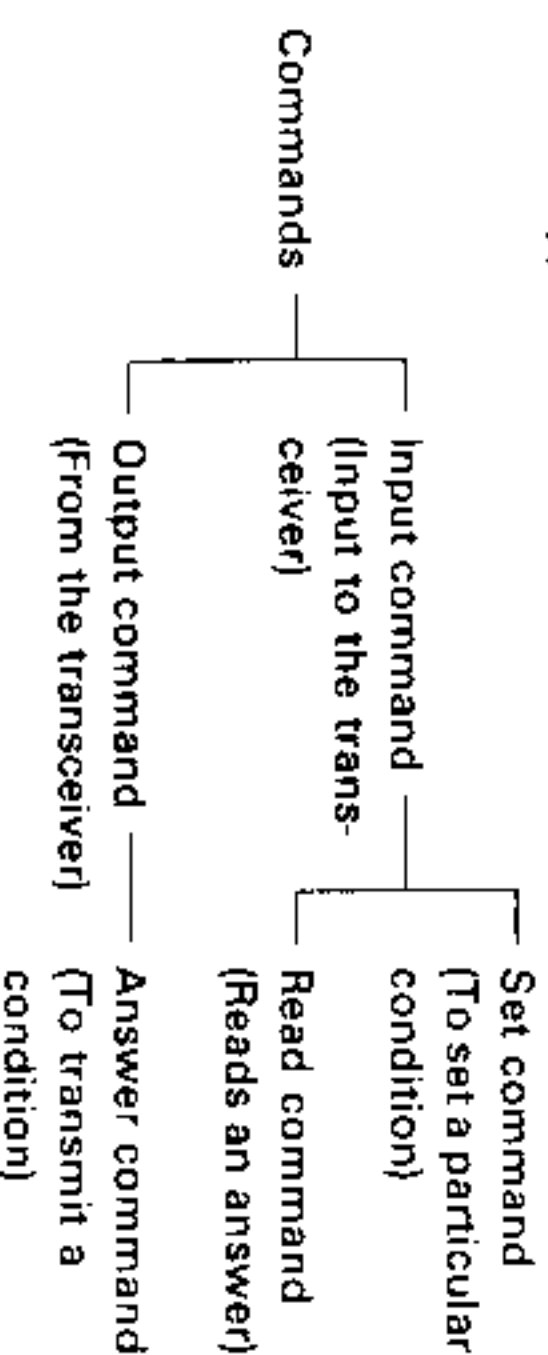
Format No.	Name	Number of columns	Format
1	SW	1	0 = OFF 1 = ON
2	MODE	1	1 = LSB 4 = FM 7 = CWN 2 = USB 5 = AM 3 = CW 6 = FSK (FSK: TS-940S only) (AM: TS-140S/680S/940S only) (CWN: TS-140S/680S only)
3	FUNCTION	1	0 = VFO A 2 = MEMORY 1 = VFO B 3 = COM (COM: TS-711A/711E/811A/811B/811E only)
4	FREQUENCY	11	Represented in Hz, using 11 columns. Example: 00007200000 is 7.2 MHz 10 GHz 1 MHz 1 kHz 1 Hz
5	RIT FREQUENCY	5	The first column is "+" or "-", and the remaining four columns indicate the frequency in Hz. Example: +5320 is +5.32 kHz
6	STEP FREQUENCY	5	Represented in Hz, using 5 columns. (TS-711A/711E/811A/811B/811E/940S only)
7	MEMORY CHANNEL	2	Represented in two columns. Example: 02 is CH2
8	MEMORY BANK	1	Represented using one column. (TS-940S only)

Format No.	Name	Number of columns	Format
9	MEMORY CHANNEL SPLIT SPECIFICATION	1	0 = Receive 1 = Transmit (TS-140S/680S/711A/711E/811A/811B/811E only)
10	MEMORY LOCKOUT	1	0 = Not locked out 1 = Locked out (TS-140S/680S/711A/711E/811A/811B/811E only)
11	TX/RX	1	0 = Receive 1 = Transmit
12	PASSBAND	2	Represented using two columns, from 00 to 31. "00" is the normal or wide position and "31" is the narrowest bandwidth (TS-940S only)
13	OFFSET	1	0 = SIMPLEX 2 = - 1 = + (TS-711A/711E/811A/811B/811E only)
14	tone FREQUENCY	2	Represented using two columns, from 01 to 37. This corresponds to the number displayed on the M.CH display during tone select operation. (TS-711A/811A/811B only)
15	CALL SIGN	6	Represented using 6 columns. Example: W6DJY (TS-711A/711E/811A/811B/811E/940S only)
16	MODEL NO.	3	Three column number specifying each set.

4-3-3. Terminator

To signal the end of a command it is necessary to use a special character. The character that has been selected for use is the semicolon ";". This special character must appear as the last character in a particular command string.

4-3-4. Types of Commands



Commands can be classified as shown in the chart above. For example, with the FA (Frequency of VFO A) command.

- To set the frequency at 7 MHz, the command sent from the computer to the transceiver is:
"FA00007000000;" (Set command)
- To read the frequency of VFO A, the command sent from the computer to the transceiver is:
"FA;" (Read command)
- When the read command, above, has been sent, the command returned to the computer is:
"FA00007000000;" (Answer command)

4-3-5. Error Messages

In addition to the answer command, the transceiver will send one of the following error messages:

?	○ When the command syntax is incorrect. ○ When the command was not executed due to the current status of the transceiver, even though the command syntax was correct. Note: _____ Occasionally this message may not appear due to microprocessor transients in the transceiver.
E;	When a communication error occurs, such as an overrun error or framing error occurs during serial data transmissions.
O;	When the receive data is sent but processing cannot be completed.

4-3-6. How to read the command tables

Command		Name		The number of the command columns is shown.		Corresponding command format	
		AI		AUTO INFORMATION			
Applicable models for the command		Applicable models		TS-140S/680S/711A/711E/811A/811B/811E/940		Parameter	Format
Function of the command		Function		AUTO INFORMATION ON/OFF setting		P1	1
The format of the command is shown. When oblique lines are drawn in the 1st and 2nd columns there is no set command.		Input commands		Set command			
		Read command					
		Output commands		Answer command			
The format of the command for reading the sets condition is shown. When oblique lines are drawn in the 1st and 2nd columns, there is no read command.							
The format of the command output from the transceiver is shown. When oblique lines are drawn in the 1st and 2nd columns, there is no answer command.							

Corresponds to the parameter of the command format.

Corresponds to the format No. in the parameter list. For the parameter formats, refer to the parameter list.

Indicates the parameters function.

Parameter	Format	Parameter function
P1	1	AI ON/OFF

Use approximately every 1.5 seconds and longer than 1.5 seconds during scanning

Usage of command, details of functions, and cautions are described.

4-3-7. Command Use Precautions

Model	Precaution
TS-140S/ 680S/711A/ 711E/811A/ 811B/811E/ 940S	The control characters (OO to IFH) when included in receive data are ignored.
TS-140S/ 680S/940S	Program execution may be delayed during rapid encoder rotation.
TS-940S	The MW (Memory Write) command cannot be executed during memory channel operation.

4-3-8. Command List

Model	Precaution
TS-940S	Receive data is not processed when directly entering the frequency from the keyboard or while the T-F SET key is depressed.
TS-811A	Note: _____ When the microprocessor is reset, as when changing the lithium battery, re-enter M.CH1 first by pressing the M.IN switch, or improper operation may result when operating with computer.
TS-140S/ 680S/711A/ 711E/811A/ 811B/811E	To enter the transmitter frequency for split frequency operations using the MW command, enter any number from 1 thru 7 as the mode and either a "O" or a "1" to indicate the memory channel lockout statue.

Command	Function	Model						Page
		TS-140S TS-680S	TS-711A	TS-711E	TS-811A TS-811B	TS-811E	TS-940S	
AI	AUTO INFORMATION	○	○	○	○	○	○	16
AT	ANTENNA TUNER		○	○	○	○	○	17
DI	DCS ID		○	○	○	○		18
DN/UP	DOWN/UP	○	○	○	○	○	○	19
DS	DCS		○	○	○	○		20

Command	Function	Model					Page	
		TS-140S TS-680S	TS-711A	TS-711E	TS-811A TS-811B	TS-811E		TS-940S
FA/FB	FREQUENCY VFO A/FREQUENCY VFO B	☐	☐	☐	☐	☐	☐	21
FN	FUNCTION	☐	☐	☐	☐	☐	☐	22
HD	SCAN HOLD	☐	☐	☐	☐	☐	☐	23
ID	ID	☐	☐	☐	☐	☐	☐	24
IF	INFORMATION	☐	☐	☐	☐	☐	☐	25
LK	LOCK	☐	☐	☐	☐	☐	☐	26
LO	LOCAL	☐	☐	☐	☐	☐	☐	27
MC	MEMORY CHANNEL	☐	☐	☐	☐	☐	☐	28
MD	MODE	☐	☐	☐	☐	☐	☐	29
MR	MEMORY READ	☐	☐	☐	☐	☐	☐	30
MS	MEMORY SCAN	☐	☐	☐	☐	☐	☐	31
MW	MEMORY WRITE	☐	☐	☐	☐	☐	☐	32
OS	OFFSET	☐	☐	☐	☐	☐	☐	33
RC	RIT CLEAR	☐	☐	☐	☐	☐	☐	34
RD/RU	RIT DOWN/RIT UP	☐	☐	☐	☐	☐	☐	35
RT	RIT	☐	☐	☐	☐	☐	☐	36
RX/TX	RX/TX	☐	☐	☐	☐	☐	☐	37
SC	SCAN	☐	☐	☐	☐	☐	☐	38
SH/SL	SLOPE TUNE HIGH/SLOPE TUNE LOW	☐	☐	☐	☐	☐	☐	39
SP	SPLIT	☐	☐	☐	☐	☐	☐	40
ST	STEP	☐	☐	☐	☐	☐	☐	41
TN	TONE NUMBER	☐	☐	☐	☐	☐	☐	42
TO	TONE	☐	☐	☒	☐	☒	☐	43
VB	VBT	☐	☐	☐	☐	☐	☐	44
VR	VOICE RECALL	☐	☐	☐	☐	☐	☐	45
XT	XIT	☐	☐	☐	☐	☐	☐	46

* This command is not applicable to "KENWOOD" versions of the TS-711E/811E.

AI
AUTO INFORMATION

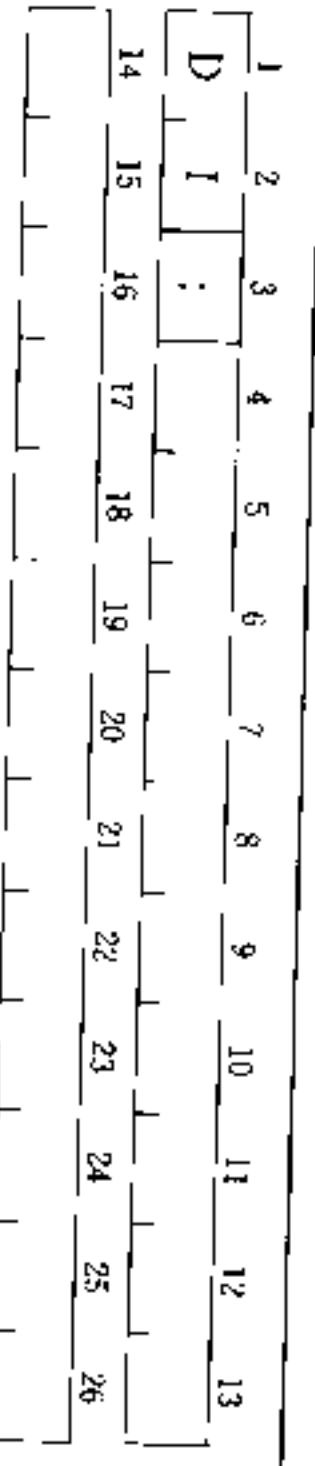
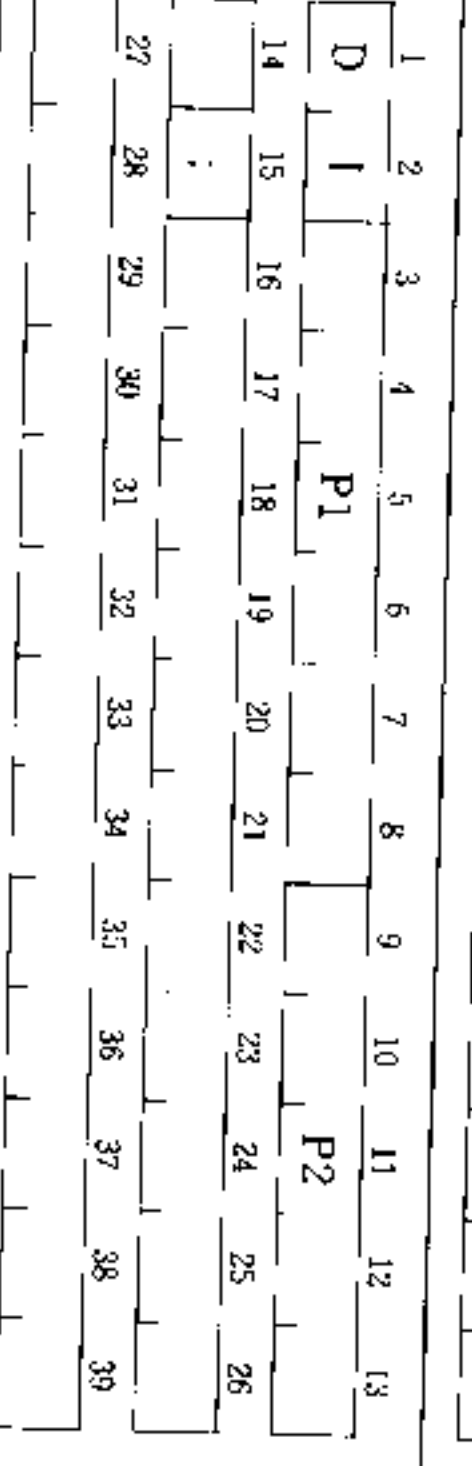
Applicable models	TS-140S/680S/711A/711E/811A/811B/811E/940S																																																																																
Function	Parameter	Format	Parameter function																																																																														
AUTO INFORMATION ON/OFF setting	P1	1	AI ON/OFF																																																																														
Input commands																																																																																	
Set command	<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr><tr><td>A</td><td>I</td><td>P1</td><td>:</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table>			1	2	3	4	5	6	7	8	9	10	11	12	13	A	I	P1	:										14	15	16	17	18	19	20	21	22	23	24	25	26																																							
1	2	3	4	5	6	7	8	9	10	11	12	13																																																																					
A	I	P1	:																																																																														
14	15	16	17	18	19	20	21	22	23	24	25	26																																																																					
Read command	<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table>			1	2	3	4	5	6	7	8	9	10	11	12	13														14	15	16	17	18	19	20	21	22	23	24	25	26																																							
1	2	3	4	5	6	7	8	9	10	11	12	13																																																																					
14	15	16	17	18	19	20	21	22	23	24	25	26																																																																					
Output commands																																																																																	
Answer command	<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr><tr><td>I</td><td>F</td><td colspan="11">For parameters, refer to "IF" command</td></tr><tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>27</td><td>28</td><td>29</td><td>30</td><td>31</td><td>32</td><td>33</td><td>34</td><td>35</td><td>36</td><td>37</td><td>38</td><td>39</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table>			1	2	3	4	5	6	7	8	9	10	11	12	13	I	F	For parameters, refer to "IF" command											14	15	16	17	18	19	20	21	22	23	24	25	26														27	28	29	30	31	32	33	34	35	36	37	38	39													
1	2	3	4	5	6	7	8	9	10	11	12	13																																																																					
I	F	For parameters, refer to "IF" command																																																																															
14	15	16	17	18	19	20	21	22	23	24	25	26																																																																					
27	28	29	30	31	32	33	34	35	36	37	38	39																																																																					
Description	(1) The "Auto Information" function checks the condition of the set once approximately every 1.5 seconds and when a change is detected automatically sends the IF command. (2) With the TS-140, the TS-680 and the TS-940 the check time is longer than 1.5 seconds during scanning or TUNING dial rotation.																																																																																

- (1) The "Auto Information" function checks the condition of the set once approximately every 1.5 seconds and when a change is detected automatically sends the IF command.
- (2) With the TS-140, the TS-680 and the TS-940 the check time is longer than 1.5 seconds during scanning or TUNING dial rotation.

AT ANTENNA TUNER

Applicable model		TS-940S		Parameter	Format	Parameter function
Function		Antenna tuner standby operation				
Description	Input commands					
	Set command					
	Read command					
	Output commands					
Answer command						

DI DCS ID

Applicable models		TS-711A/711E/811A/811B/811E			
Function	DCS call sign readout		Parameter	Format	Parameter function
	Set command		P1	15	Call sign of your station
			P2	15	Call sign of receiving station
	Read command				
	Answer command				
Description		The call sign of the receiving station should read out as soon as a signal is received. The analysis of incoming call signs is continuous. However the call sign may be incorrectly display due to noise.			

DN **UP** DOWN/UP

Applicable models		TS-140S/680S/711A/711E/811A/811B/811E/940S	Parameter	Format	Parameter function
Function		Same function as microphone UP/DOWN switch			
Input commands					
Set command					
Read command					
Output commands					
Answer command					
Description					

DS **DCS**

Applicable models		TS-711A/711E/811A/811B/811E			
Function	DCS system ON/OFF selection and readout				
	Parameter	Format	Parameter function		
	P1	1	DCS ON/OFF		
Input commands					
Set command	1 2 3 4 5 6 7 8 9 10 11 12 13 D S P1 : 14 15 16 17 18 19 20 21 22 23 24 25 26				
Read command	1 2 3 4 5 6 7 8 9 10 11 12 13 D S : 14 15 16 17 18 19 20 21 22 23 24 25 26				
Output commands					
Answer command	1 2 3 4 5 6 7 8 9 10 11 12 13 D S P1 : 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39				
Description					

FA **FB** FREQUENCY VFO A/FREQUENCY VFO B

Applicable models	TS-140S/680S/711A/711E/811A/811B/811E/940S		
Function	Parameter	Format	Parameter function
VFO A and VFO B frequency selection and readout	P1	4	FREQUENCY
Description			

Input commands	Output commands																																																																																																																																																												
Set command	Answer command																																																																																																																																																												
<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr><tr><td colspan="2">V A</td><td colspan="2"></td><td colspan="2"></td><td colspan="2">P1</td><td colspan="5"></td></tr><tr><td>F B</td><td>:</td><td colspan="11"></td></tr><tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr><tr><td colspan="2">:</td><td colspan="11"></td></tr></table>	1	2	3	4	5	6	7	8	9	10	11	12	13	V A						P1							F B	:												14	15	16	17	18	19	20	21	22	23	24	25	26	:													<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr><tr><td colspan="2">F A</td><td colspan="2"></td><td colspan="2"></td><td colspan="2">P1</td><td colspan="5"></td></tr><tr><td>F B</td><td>:</td><td colspan="11"></td></tr><tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr><tr><td colspan="2">:</td><td colspan="11"></td></tr><tr><td>27</td><td>28</td><td>29</td><td>30</td><td>31</td><td>32</td><td>33</td><td>34</td><td>35</td><td>36</td><td>37</td><td>38</td><td>39</td></tr><tr><td colspan="13"></td></tr></table>	1	2	3	4	5	6	7	8	9	10	11	12	13	F A						P1							F B	:												14	15	16	17	18	19	20	21	22	23	24	25	26	:													27	28	29	30	31	32	33	34	35	36	37	38	39													
1	2	3	4	5	6	7	8	9	10	11	12	13																																																																																																																																																	
V A						P1																																																																																																																																																							
F B	:																																																																																																																																																												
14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																																																																																	
:																																																																																																																																																													
1	2	3	4	5	6	7	8	9	10	11	12	13																																																																																																																																																	
F A						P1																																																																																																																																																							
F B	:																																																																																																																																																												
14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																																																																																	
:																																																																																																																																																													
27	28	29	30	31	32	33	34	35	36	37	38	39																																																																																																																																																	
Read command																																																																																																																																																													
<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr><tr><td colspan="2">E A</td><td colspan="2"></td><td colspan="9"></td></tr><tr><td>F B</td><td>:</td><td colspan="11"></td></tr><tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr><tr><td colspan="2">:</td><td colspan="11"></td></tr></table>	1	2	3	4	5	6	7	8	9	10	11	12	13	E A													F B	:												14	15	16	17	18	19	20	21	22	23	24	25	26	:																																																																																																								
1	2	3	4	5	6	7	8	9	10	11	12	13																																																																																																																																																	
E A																																																																																																																																																													
F B	:																																																																																																																																																												
14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																																																																																	
:																																																																																																																																																													

FN FUNCTION

Applicable models	TS-140S/680S/711A/711E/811A/811B/811E/940S		
Function	Parameter	Format	Parameter function
VFO A and VFO B MEMORY COM setting (COM: TS-711/811 Only)	P1	3	FUNCTION
Input commands		Output commands	
Set command	12345678910111213 F N P1 : 14151617181920212223242526	Read command	12345678910111213 14151617181920212223242526
Answer command	12345678910111213 14151617181920212223242526 27282930313233343536373839		
Description			

HD SCAN HOLD

Applicable model		TS-940S		
Function	Temporary scan.	Parameter	Format	Parameter function
		P1	1	SCAN HOLD ON/OFF
Input commands				
Set command				
1 2 3 4 5 6 7 8 9 10 11 12 13				
H D P1 ;				
14 15 16 17 18 19 20 21 22 23 24 25 26				
Read command				
1 2 3 4 5 6 7 8 9 10 11 12 13				
H D ;				
14 15 16 17 18 19 20 21 22 23 24 25 26				
Output commands				
Answer command				
1 2 3 4 5 6 7 8 9 10 11 12 13				
H D P1 ;				
14 15 16 17 18 19 20 21 22 23 24 25 26				
</				

ID

ID

Applicable models		TS-140S/680S/711A/711E/811A/811B/811E/940S
Model No. readout for transceiver recognition.		
Function	Parameter	
	Format	Parameter function
	P1	16MODEL No. TS-140/680: 006 TS-711 : 001 TS-811 : 002 TS-940 : 003
Input commands		
Set command		
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26		
Read command		
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26		
Output commands		
Answer command		
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26		
Description		

IF INFORMATION

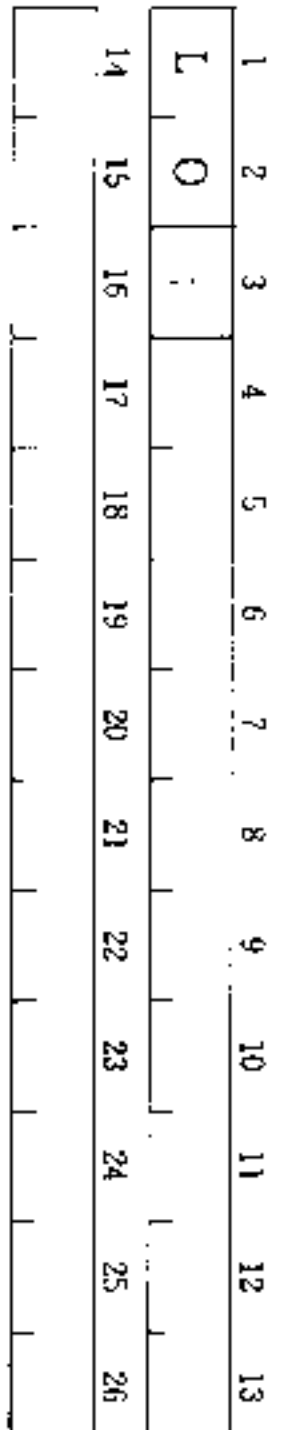
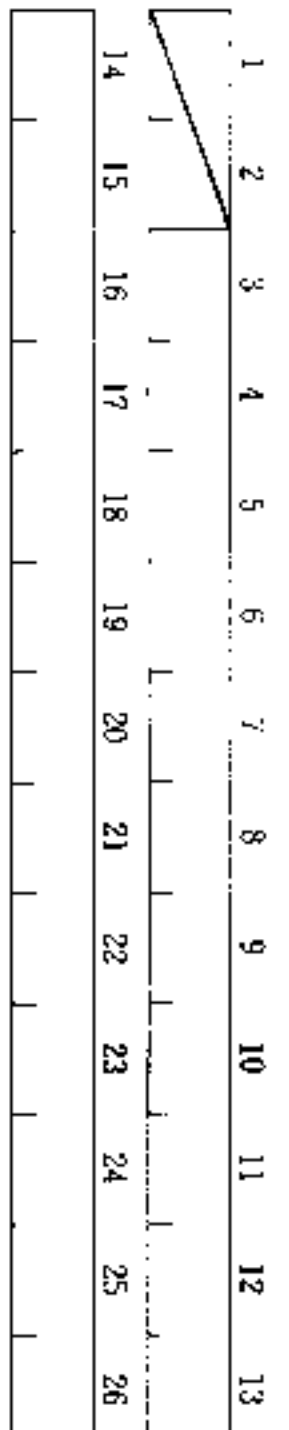
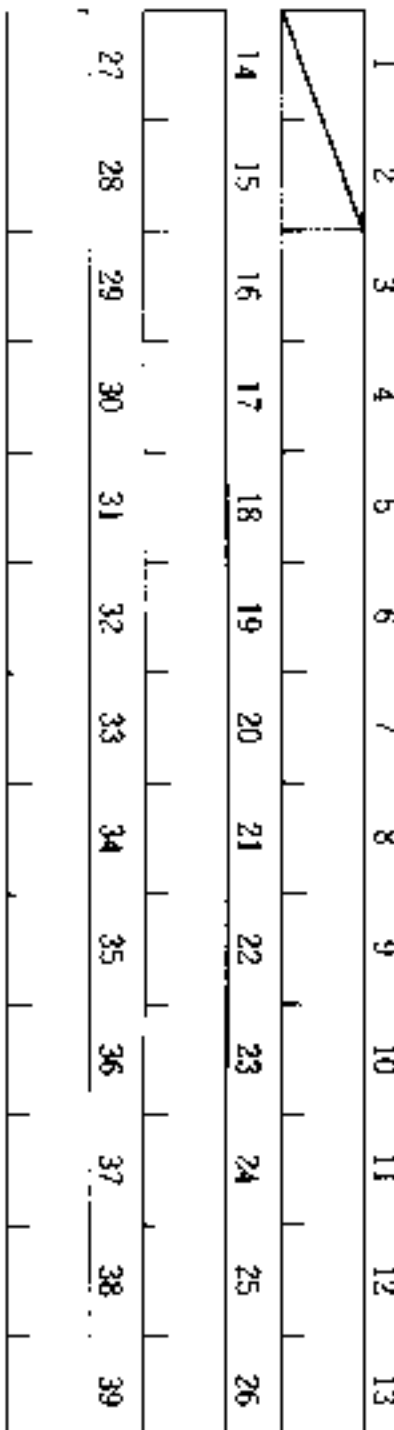
Applicable models	TS-140S/680S/711A/711E/811A/811B/811E/940S		
Function	Parameter	Format	Parameter function
Display of transceivers current condition	P1	4	DISPLAY FREQUENCY
	P2	6	STEP FREQUENCY (TS-711A/711E/811A/811B/811E/940S only)
	P3	5	RIT FREQUENCY
	P4	1	RIT ON/OFF
	P5	1	XIT ON/OFF (TS-711A/711E/811A/811B/811E/940S only)
	P6	8	MEMORY BANK (TS-940S only)
	P7	7	MEMORY CHANNEL
	P8	11	TX/RX
	P9	2	MODE
	P10	3	FUNCTION
Input commands	Set command		
Output commands	Read command		
Description	Answer command		

- (1) When the frequency step of the TS-711A/711E/811A/811B/811E is changed, the step frequency of the IF command will hold the previous value until the frequency is changed.
- (2) * This command is not applicable to "KENWOOD" versions of the TS-711E/811E.

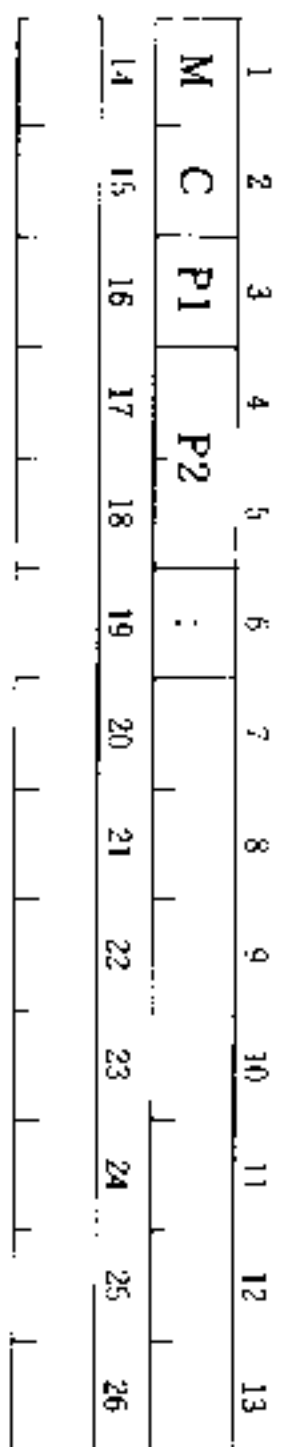
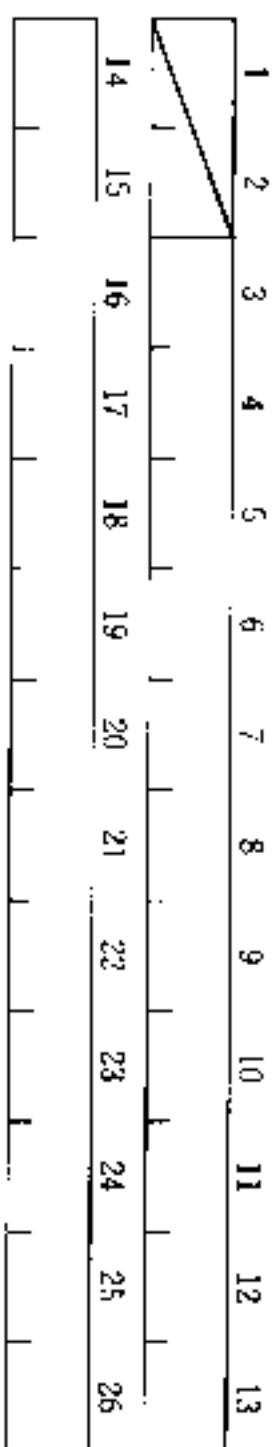
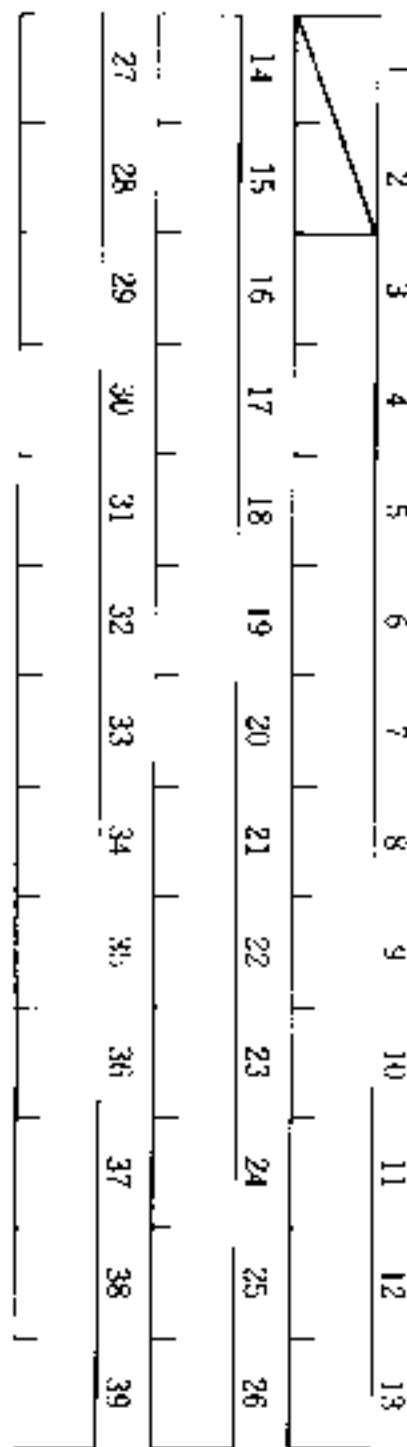
LK LOCK

Applicable models		TS-140S/680S/711A/711E/811A/811B/811E/940S			
Function	LOCK ON/OFF setting and display		Parameter	Format	Parameter function
			P1	1	LOCK ON/OFF
Description	Input commands				
	Read command	Set command			
	Answer command				
	12345678910111213 LK:P1; 14151617181920212223242526	12345678910111213 LK; 14151617181920212223242526			
	12345678910111213 LKP1; 14151617181920212223242526 27282930313233343536373839				

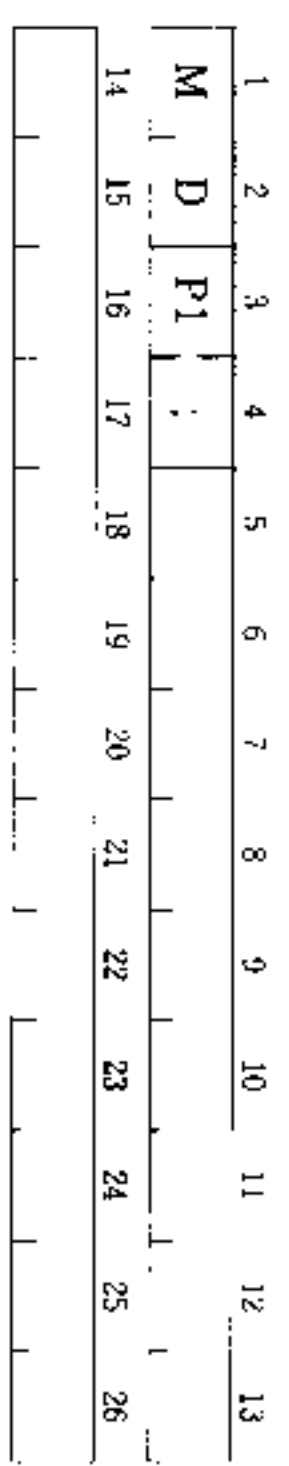
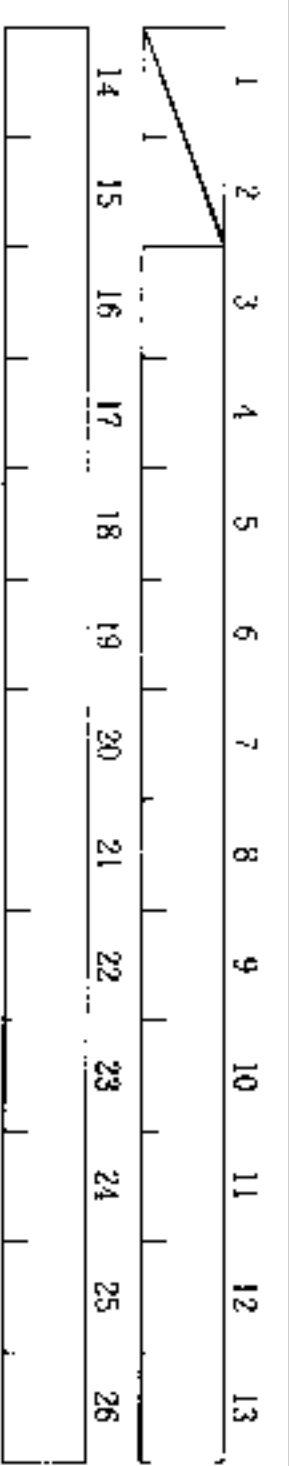
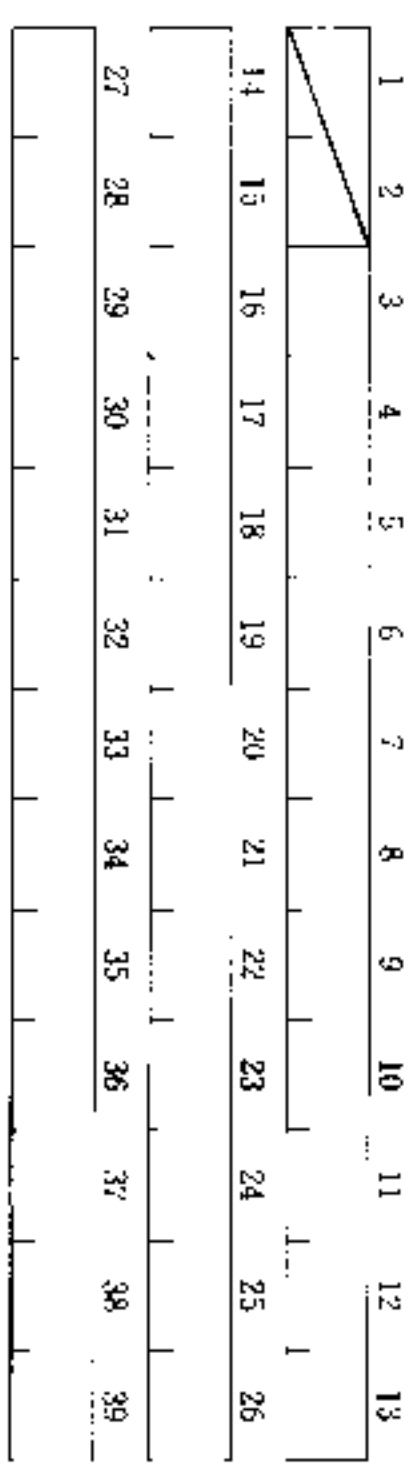
LO LOCAL

Applicable model		TS-940S		Parameter	Format	Parameter function
Function		When a personal computer is used to control VBT etc., the transceivers associated controls are disabled. This command releases control back to the transceivers controls.				
Input commands	Set command					
	Read command					
	Answer command					
Description		When the VB, SL, SH, MC or TX command is executed, the associated switches and controls will not function until the LO command is sent from the computer.				

MC MEMORY CHANNEL

Applicable models		TS-140S/680S/711A/711E/811A/811B/811E/940S		
Memory channel setting		Parameter	Format	Parameter function
Function		P1	8	MEMORY BANK (TS-940S only)
		P2	7	MEMORY CHAN- NEL
Input commands				
Set command				
				
Read command				
				
Output commands				
Answer command				
				
With the TS-940, this command will disable the MEMORY BANK switch associated top cover switch.				

MD **MODE**

Applicable models		TS-140S/680S/711A/711E/811A/811B/811E/940S		
Function	Mode setting	Parameter	Format	Parameter function
		P1	2	MODE
Input commands				
Set command				
				
Read command				
				
Output commands				
Answer command				
				
Description				

MR	MEMORY READ
----	-------------

Applicable models		TS-140S/680S/711A/711E/811A/811B/811E/940S		
Function	Memory display	Parameter	Format	Parameter function
		P1	9	SPLIT SPECIFICATION
		P2	8	MEMORY BANK (TS-940S only)
		P3	7	MEMORY CHANNEL
		P4	4	FREQUENCY
		P5	2	MODE
		P6	10	MEMORY LOCKOUT (TS-140S/680S/711A/ 711E/811A/811B/ 811E only)
		P7	1	TONE ON/OFF (TS-711A/711E/811A/ 811B/811E only)*
		P8	14	TONE FREQUENCY (TS-711A/811A/811B only)
		P9	13	OFFSET (TS-711A/711E/ 811A/811B/811E only)
Input commands				
	Set command			
		1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26		
</				

MS MEMORY SCAN

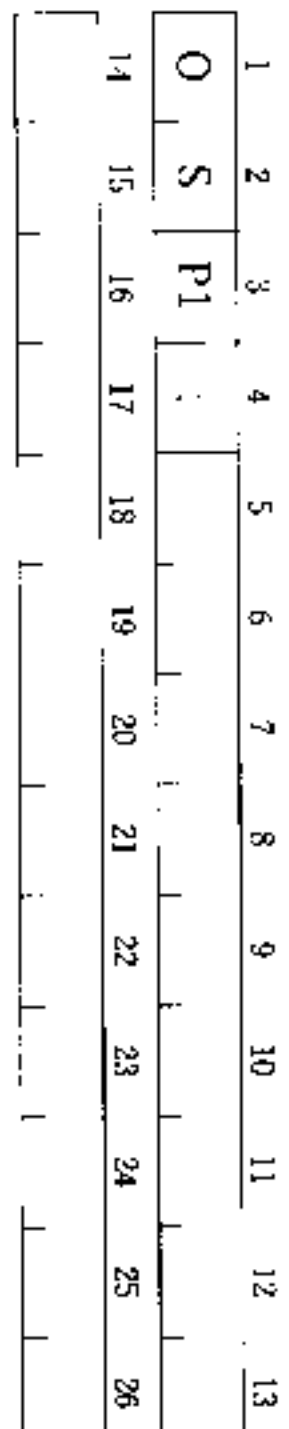
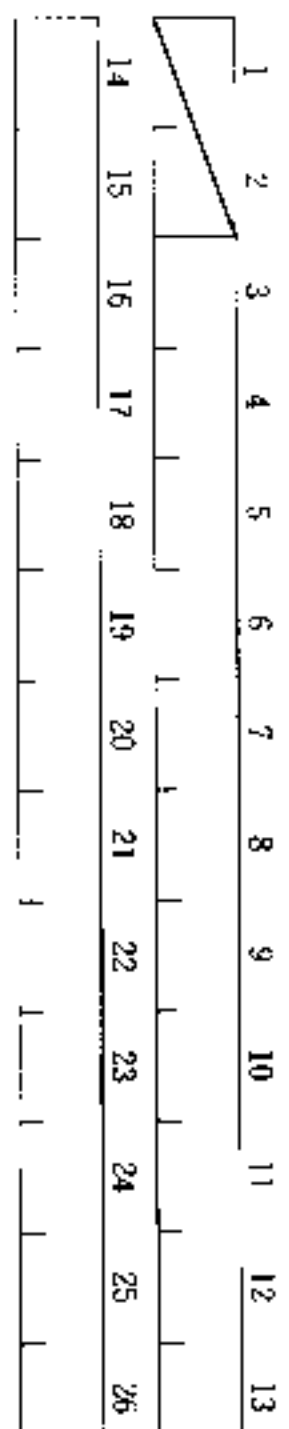
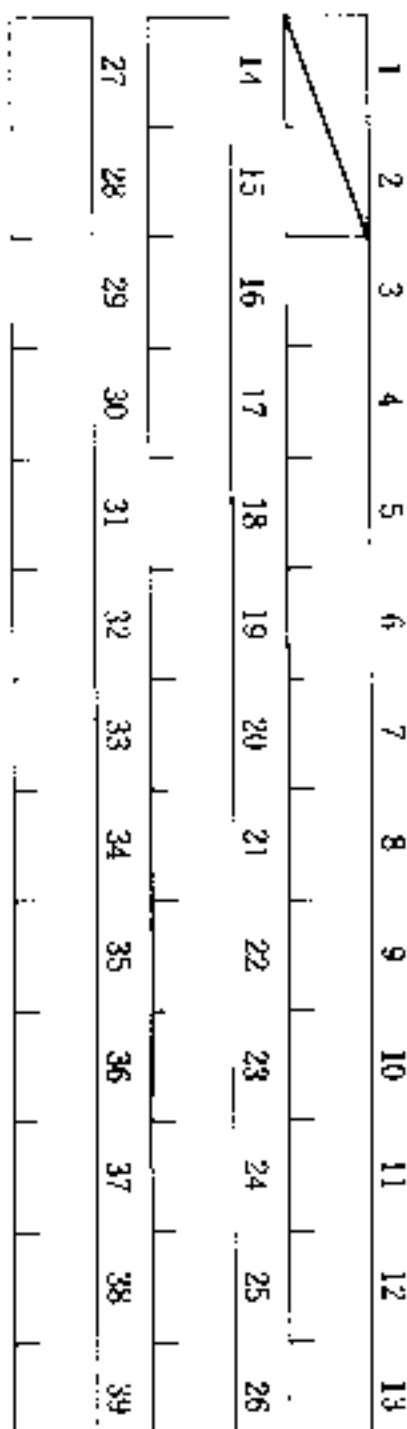
Applicable model		TS-940S				
Function	Memory scan ON/OFF and display			Parameter	Format	Parameter function
		P1	1	MEMORY SCAN ON/OFF		
Input commands						
Set command	12345678910111213 MSP1; 14151617181920212223242526					
Read command	12345678910111213 MSP; 14151617181920212223242526					
Output commands						
Answer command	12345678910111213 MSP1; 14151617181920212223242526 27282930313233343536373839					
Description						

MM

MEMORY WRITE

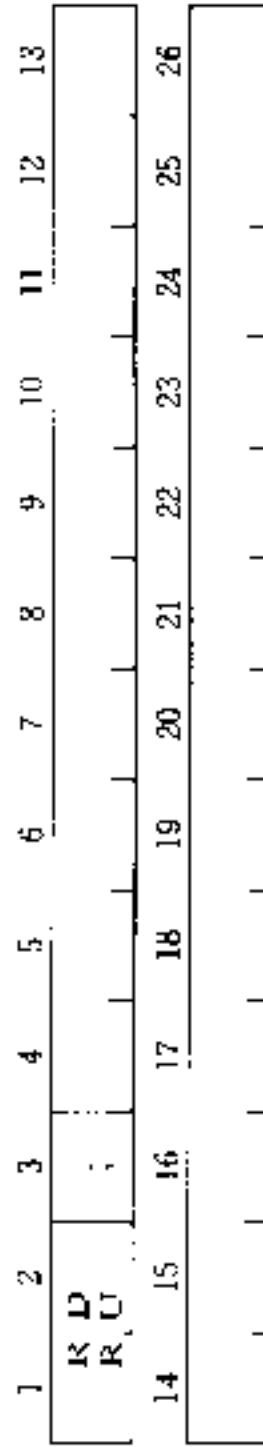
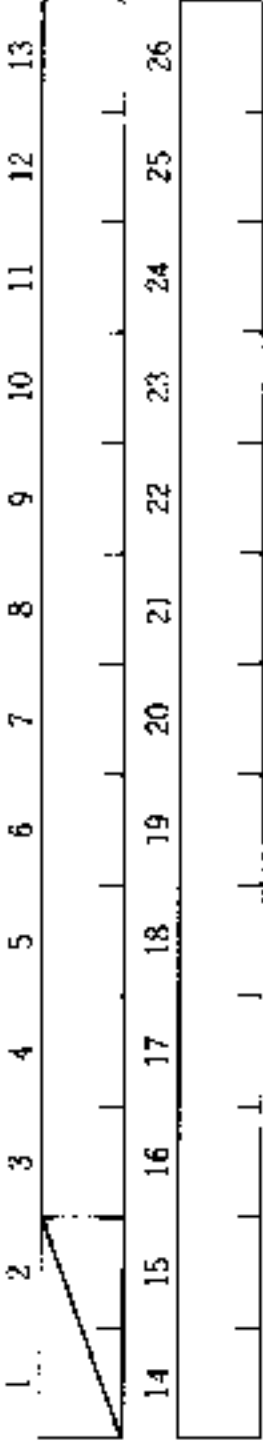
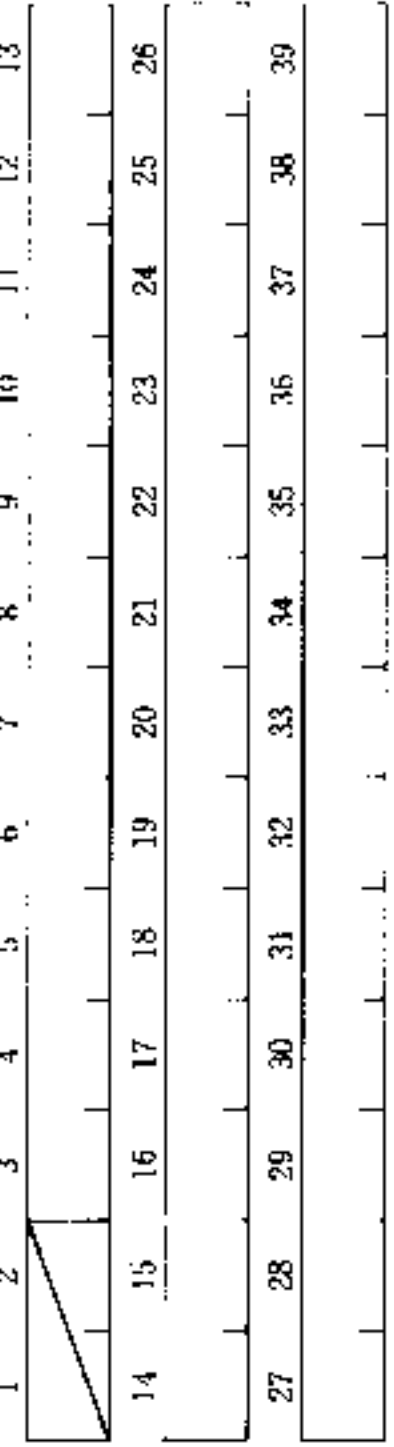
Applicable models	TS-140S/680S/711A/711E/811A/811B/811E/940S												Parameter	Format	Parameter function
Function	Memory entry												P1	9	SPLIT SPECIFICATION
													P2	8	MEMORY BANK (TS-940S only)
													P3	7	MEMORY CHANNEL
													P4	4	FREQUENCY
													P5	2	MODE
Input commands	Set command												P6	10	MEMORY LOCKOUT (TS-140S/680S/711A/ 711E/811A/811B/ 811E only)
													P7	1	TONE ON/OFF (TS-711A/711E/811A/ 811B/811E only)*
													P8	14	TONE FREQUENCY (TS-711A/811A/811B/ only)
													P9	13	OFF SET (TS-711A/711E/811A/ 811B/811E only)
Output commands	Read command														
Description	Answer command														
(1) The MW command is valid when all parameters have been correctly entered. (2) When all effective frequency columns are "0", the memory is set to an open channel. (3) When the split channel of the TS-140S/680S/711A/711E/811A/811B/811E is open, the transceiver will be set for the same transmit and receive frequencies, i.e. simplex. (4) * This command is not applicable to "KENWOOD" versions of the TS-711E/811E. (5) With the TS-140 and the TS-680 to recall the lowest operating frequency of the section use P1 = 1, and to recall the highest operating frequency use P1 = 0.															

OS OFFSET

Applicable models		TS-711A/711E/811A/811B/811E		
Function	OFFSET setting	Parameter	Format	Parameter function
		P1	13	OFFSET
Input commands				
Set command				
				
Read command				
				
Output commands				
Answer command				
				
Description				

RC RIT CLEAR

Applicable models		TS-140S/680S/711A/711E/811A/811B/811E/940S												Parameter	Format	Parameter function	
Function	RIT frequency clearance																
Input commands	Set command	1 2 3 4 5 6 7 8 9 10 11 12 13 R C : 14 15 16 17 18 19 20 21 22 23 24 25 26															
	Read command	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26															
Output commands	Answer command	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39															
Description	When using these commands the center frequency point on the RIT control may not coincide with the center point printed on the front panel. The center point will coincide with the position of the RIT control before these commands were initiated. (TS-140S/680S only)																

Applicable models	TS-140S/680S/711A/711E/811A/811B/811E/940S	Parameter	Format	Parameter function
Function	RIT frequency UP/DOWN			
Input commands	Set command			
	Read command			
	Answer command			
Output commands				
Description	When using these commands the center frequency point on the RIT control may not coincide with the center point printed on the front panel. The center point will coincide with the position of the RIT control before these commands were initiated. (TS-140S/680S only)			

Applicable models		TS-140S/680S/711A/711E/811A/811B/811E/940S		Parameter	Format	Parameter function																																																																																																						
Function	RIT ON/OFF setting																																																																																																											
Input commands	Set command	<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr><tr><td colspan="2">R</td><td colspan="2">T</td><td colspan="2">P1</td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td></tr><tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr><tr><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td></tr></table>																										1	2	3	4	5	6	7	8	9	10	11	12	13	R		T		P1										14	15	16	17	18	19	20	21	22	23	24	25	26																																									
	1	2	3	4	5	6	7	8	9	10	11	12	13																																																																																															
	R		T		P1																																																																																																							
14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																																
Input commands	Read command	<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr><tr><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td></tr><tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr><tr><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td></tr></table>																										1	2	3	4	5	6	7	8	9	10	11	12	13															14	15	16	17	18	19	20	21	22	23	24	25	26																																									
	1	2	3	4	5	6	7	8	9	10	11	12	13																																																																																															
14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																																
Output commands	Answer command	<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr><tr><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td></tr><tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr><tr><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td></tr><tr><td>27</td><td>28</td><td>29</td><td>30</td><td>31</td><td>32</td><td>33</td><td>34</td><td>35</td><td>36</td><td>37</td><td>38</td><td>39</td></tr><tr><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td></tr></table>																										1	2	3	4	5	6	7	8	9	10	11	12	13															14	15	16	17	18	19	20	21	22	23	24	25	26															27	28	29	30	31	32	33	34	35	36	37	38	39														
1	2	3	4	5	6	7	8	9	10	11	12	13																																																																																																
14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																																
27	28	29	30	31	32	33	34	35	36	37	38	39																																																																																																
Description																																																																																																												

Applicable models	TS-140S/680S/711A/711E/811A/811B/811E/940S	Parameter	Format	Parameter function																																																																														
Function	RX: For receive operation TX: For transmit operation																																																																																	
Input commands	Set command	<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr><tr><td colspan="2">RX</td><td colspan="2">TX</td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td></tr><tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr><tr><td colspan="13"></td></tr></table>			1	2	3	4	5	6	7	8	9	10	11	12	13	RX		TX										14	15	16	17	18	19	20	21	22	23	24	25	26																																								
	1	2	3	4	5	6	7	8	9	10	11	12	13																																																																					
	RX		TX																																																																															
14	15	16	17	18	19	20	21	22	23	24	25	26																																																																						
Read command	<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr><tr><td colspan="13"></td></tr><tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr><tr><td colspan="13"></td></tr></table>			1	2	3	4	5	6	7	8	9	10	11	12	13														14	15	16	17	18	19	20	21	22	23	24	25	26																																								
1	2	3	4	5	6	7	8	9	10	11	12	13																																																																						
14	15	16	17	18	19	20	21	22	23	24	25	26																																																																						
Output commands	Answer command	<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr><tr><td colspan="13"></td></tr><tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr><tr><td colspan="13"></td></tr><tr><td>27</td><td>28</td><td>29</td><td>30</td><td>31</td><td>32</td><td>33</td><td>34</td><td>35</td><td>36</td><td>37</td><td>38</td><td>39</td></tr><tr><td colspan="13"></td></tr></table>			1	2	3	4	5	6	7	8	9	10	11	12	13														14	15	16	17	18	19	20	21	22	23	24	25	26														27	28	29	30	31	32	33	34	35	36	37	38	39													
1	2	3	4	5	6	7	8	9	10	11	12	13																																																																						
14	15	16	17	18	19	20	21	22	23	24	25	26																																																																						
27	28	29	30	31	32	33	34	35	36	37	38	39																																																																						
Description	With the TS-940 place the stand-by switch to REC.																																																																																	

SC **SCAN**

Applicable models		TS-140S/680S/711A/711E/811A/811B/811E/940S														Parameter	Format	Parameter function									
Function	Scan ON/OFF setting																		P1	1	SCAN ON/OFF						
Input commands	Set command																										
Description																											

Applicable model		TS-940S												Parameter	Format	Parameter function			
Function	Slope tune band setting and readout.																		
Input commands	Set command	1 2 3 4 5 6 7 8 9 10 11 12 13 SH SL P1 : 14 15 16 17 18 19 20 21 22 23 24 25 26																	
	Read command	1 2 3 4 5 6 7 8 9 10 11 12 13 SH SL : 14 15 16 17 18 19 20 21 22 23 24 25 26																	
Output commands	Answer command	1 2 3 4 5 6 7 8 9 10 11 12 13 SH SL P1 : 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39																	
Description	The execution of this command will disable the transceivers associated front panel controls.																		

SP SPLIT

Applicable models		TS-140S/680S/711A/711E/811A/811B/811E/940S												Parameter	Format	Parameter function																																																																											
Function	SPLIT ON/OFF setting													P1	1	SPLIT ON/OFF																																																																											
Input commands	Set command	<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr><tr><td>S</td><td>P</td><td>P1</td><td>:</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table>												1	2	3	4	5	6	7	8	9	10	11	12	13	S	P	P1	:										14	15	16	17	18	19	20	21	22	23	24	25	26																																							
		1	2	3	4	5	6	7	8	9	10	11	12	13																																																																													
		S	P	P1	:																																																																																						
14	15	16	17	18	19	20	21	22	23	24	25	26																																																																															
Input commands	Read command	<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table>												1	2	3	4	5	6	7	8	9	10	11	12	13														14	15	16	17	18	19	20	21	22	23	24	25	26																																							
		1	2	3	4	5	6	7	8	9	10	11	12	13																																																																													
14	15	16	17	18	19	20	21	22	23	24	25	26																																																																															
Output commands	Answer command	<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>27</td><td>28</td><td>29</td><td>30</td><td>31</td><td>32</td><td>33</td><td>34</td><td>35</td><td>36</td><td>37</td><td>38</td><td>39</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table>												1	2	3	4	5	6	7	8	9	10	11	12	13														14	15	16	17	18	19	20	21	22	23	24	25	26														27	28	29	30	31	32	33	34	35	36	37	38	39													
		1	2	3	4	5	6	7	8	9	10	11	12	13																																																																													
14	15	16	17	18	19	20	21	22	23	24	25	26																																																																															
27	28	29	30	31	32	33	34	35	36	37	38	39																																																																															
Description																																																																																											

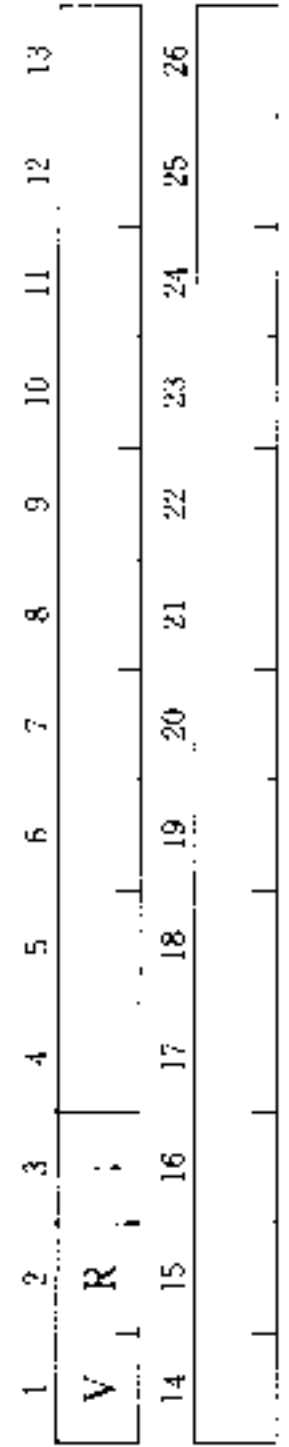
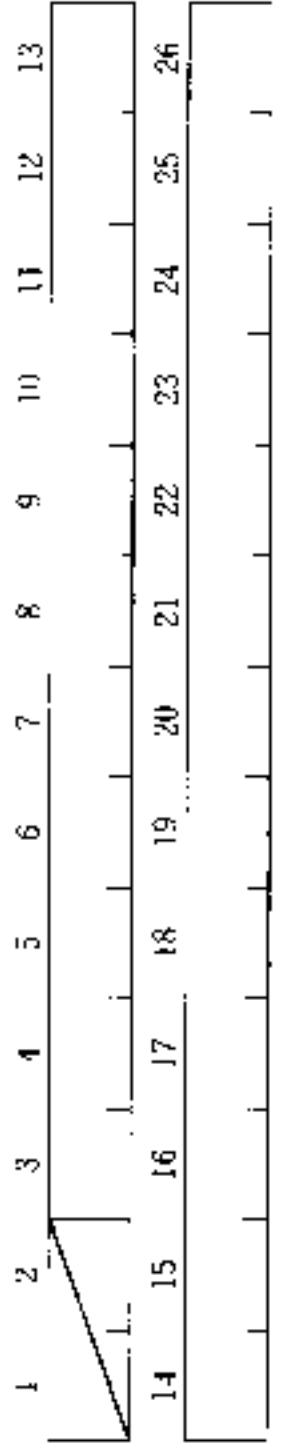
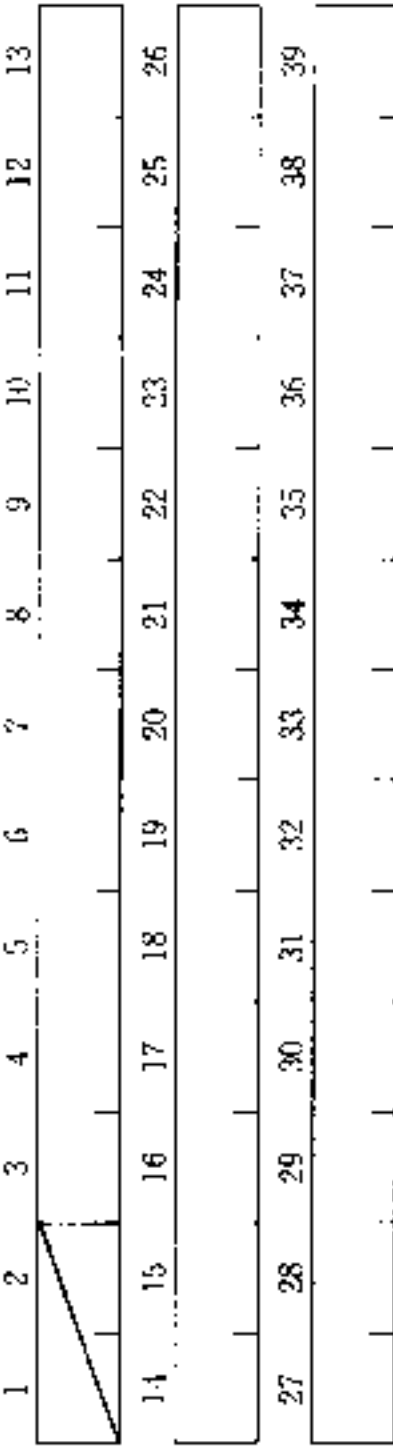
Applicable models		TS-711A/711E/811A/811B/811E													Parameter	Format	Parameter function																																																																															
Function	STEP ON/OFF setting																	P1	1	STEP ON/OFF																																																																												
Input commands	Set command	<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr><tr><td>S</td><td>T</td><td>P1</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table>																	1	2	3	4	5	6	7	8	9	10	11	12	13	S	T	P1											14	15	16	17	18	19	20	21	22	23	24	25	26																																							
	1	2	3	4	5	6	7	8	9	10	11	12	13																																																																																			
	S	T	P1																																																																																													
14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																				
	Read command	<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table>																	1	2	3	4	5	6	7	8	9	10	11	12	13														14	15	16	17	18	19	20	21	22	23	24	25	26																																							
1	2	3	4	5	6	7	8	9	10	11	12	13																																																																																				
14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																				
Output commands	Answer command	<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>27</td><td>28</td><td>29</td><td>30</td><td>31</td><td>32</td><td>33</td><td>34</td><td>35</td><td>36</td><td>37</td><td>38</td><td>39</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table>																	1	2	3	4	5	6	7	8	9	10	11	12	13														14	15	16	17	18	19	20	21	22	23	24	25	26														27	28	29	30	31	32	33	34	35	36	37	38	39													
1	2	3	4	5	6	7	8	9	10	11	12	13																																																																																				
14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																				
27	28	29	30	31	32	33	34	35	36	37	38	39																																																																																				
Description																																																																																																

Applicable models		TS-711A/811A/811B													Parameter	Format	Parameter function																																																																														
Function	Sub-tone frequency setting																																																																																														
Input commands	Set command	<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr><tr><td>T</td><td>N</td><td>P1</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table>																1	2	3	4	5	6	7	8	9	10	11	12	13	T	N	P1											14	15	16	17	18	19	20	21	22	23	24	25	26																																							
	1	2	3	4	5	6	7	8	9	10	11	12	13																																																																																		
	T	N	P1																																																																																												
14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																			
Input commands	Read command	<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table>																1	2	3	4	5	6	7	8	9	10	11	12	13														14	15	16	17	18	19	20	21	22	23	24	25	26																																							
	1	2	3	4	5	6	7	8	9	10	11	12	13																																																																																		
14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																			
Output commands	Answer command	<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>27</td><td>28</td><td>29</td><td>30</td><td>31</td><td>32</td><td>33</td><td>34</td><td>35</td><td>36</td><td>37</td><td>38</td><td>39</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table>																1	2	3	4	5	6	7	8	9	10	11	12	13														14	15	16	17	18	19	20	21	22	23	24	25	26														27	28	29	30	31	32	33	34	35	36	37	38	39													
1	2	3	4	5	6	7	8	9	10	11	12	13																																																																																			
14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																			
27	28	29	30	31	32	33	34	35	36	37	38	39																																																																																			
Description																																																																																															
		P1	14											TONE FREQUENCY																																																																																	

TO TONE

Applicable models	TS-711A/711E/811A/811B/811E*	Parameter	Format	Parameter function
Function	TONE ON/OFF setting	P1	1	TONE ON/OFF
Input commands	Set command Read command Answer command			
Output commands				
Description	* This command is not applicable to "KENWOOD" versions of the TS-711E/811E.			

Applicable model		TS-940S		Parameter	Format	Parameter function																																																																															
Function	VBT passband setting and display																																																																																				
Input commands	Set command	<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr><tr><td>V</td><td>B</td><td></td><td>P1</td><td>:</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table>						1	2	3	4	5	6	7	8	9	10	11	12	13	V	B		P1	:									14	15	16	17	18	19	20	21	22	23	24	25	26																																							
	1	2	3	4	5	6	7	8	9	10	11	12	13																																																																								
	V	B		P1	:																																																																																
14	15	16	17	18	19	20	21	22	23	24	25	26																																																																									
	Read command	<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr><tr><td>V</td><td>B</td><td>:</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table>						1	2	3	4	5	6	7	8	9	10	11	12	13	V	B	:											14	15	16	17	18	19	20	21	22	23	24	25	26																																							
1	2	3	4	5	6	7	8	9	10	11	12	13																																																																									
V	B	:																																																																																			
14	15	16	17	18	19	20	21	22	23	24	25	26																																																																									
Output commands	Answer command	<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr><tr><td>V</td><td>B</td><td></td><td>P1</td><td>:</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>27</td><td>28</td><td>29</td><td>30</td><td>31</td><td>32</td><td>33</td><td>34</td><td>35</td><td>36</td><td>37</td><td>38</td><td>39</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table>						1	2	3	4	5	6	7	8	9	10	11	12	13	V	B		P1	:									14	15	16	17	18	19	20	21	22	23	24	25	26														27	28	29	30	31	32	33	34	35	36	37	38	39													
1	2	3	4	5	6	7	8	9	10	11	12	13																																																																									
V	B		P1	:																																																																																	
14	15	16	17	18	19	20	21	22	23	24	25	26																																																																									
27	28	29	30	31	32	33	34	35	36	37	38	39																																																																									
Description	The execution of this command disables the transceivers associated front panel controls.																																																																																				
		P1	12	PASSBAND																																																																																	

Applicable models		TS-711A/711E/811A/811B/811E/940S														Parameter	Format	Parameter function	
Function	Generation of synthesized voice.																		
Input commands	Set command																		
	Read command																		
	Answer command																		
Output commands																			
Description	Requires the use of the optional VS-1 Voice Synthesizer.																		

Applicable model		TS-940S												Parameter	Format	Parameter function		
Function	XIT ON/OFF setting															P1	1	XIT ON/OFF
Input commands	Set command	1 2 3 4 5 6 7 8 9 10 11 12 13 X T P1 : 14 15 16 17 18 19 20 21 22 23 24 25 26																
		1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26																
		1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26																
Output commands	Answer command	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39																
Description																		

5. SCHEMATIC DIAGRAM

(X57-1160-00,01,02)

